


QUICK-START USER GUIDE -VISIOBOX

The purpose of this quick-start guide is to give you a brief overview of the functions to be used to view or extract a recording using your Visiobox.
 First of all, please note that the Visiobox must be switched on for recording to take place.


I/ Accessing your VisioBox

Go to www.innovatys.co.uk (Visiobox requires the use of Internet Explorer). Enter your login (username) and the password selected on installation, then click OK.

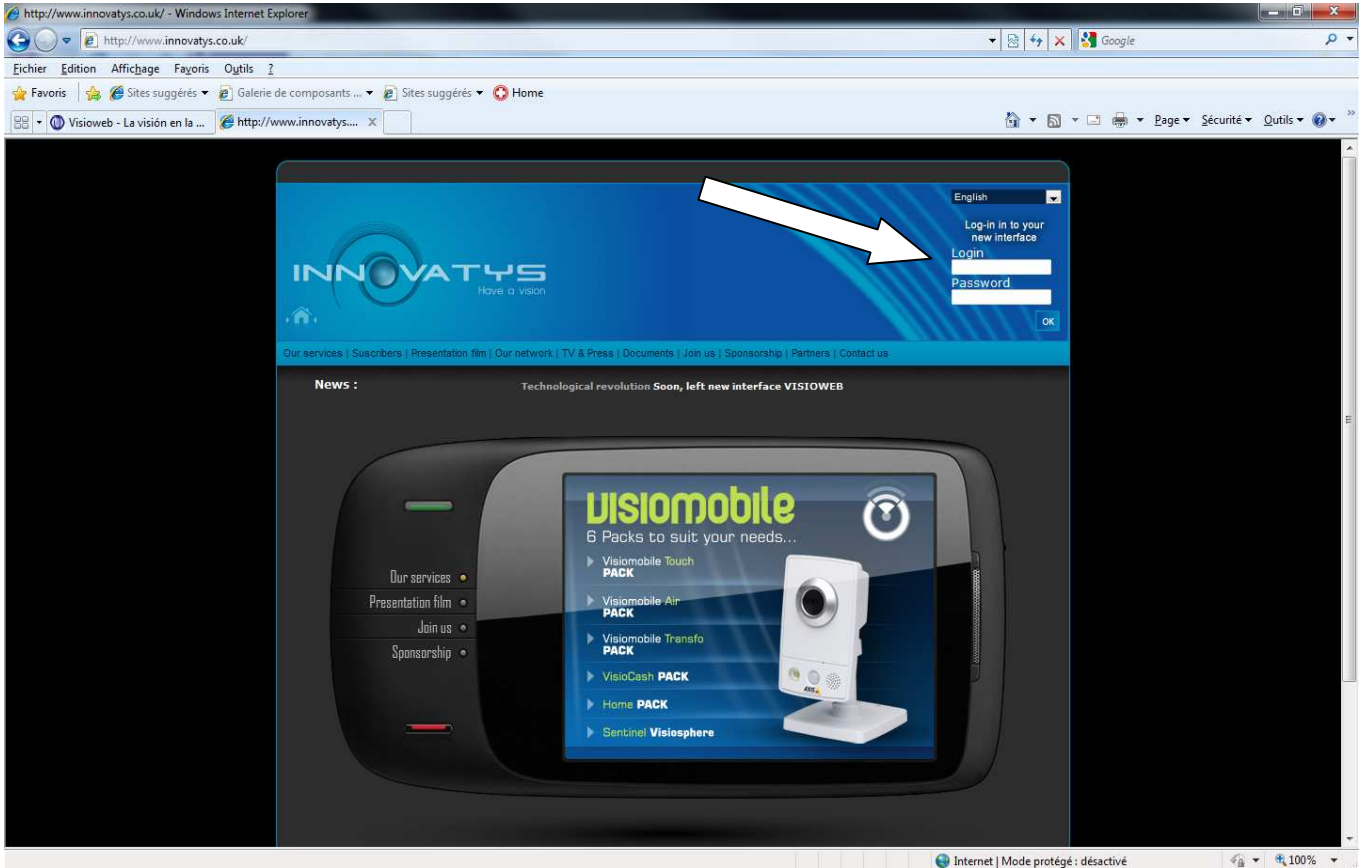


II/ Viewing and extracting a recording

Click on 'Configuration', then on the Visiobox of your choice in 'Recording server'.

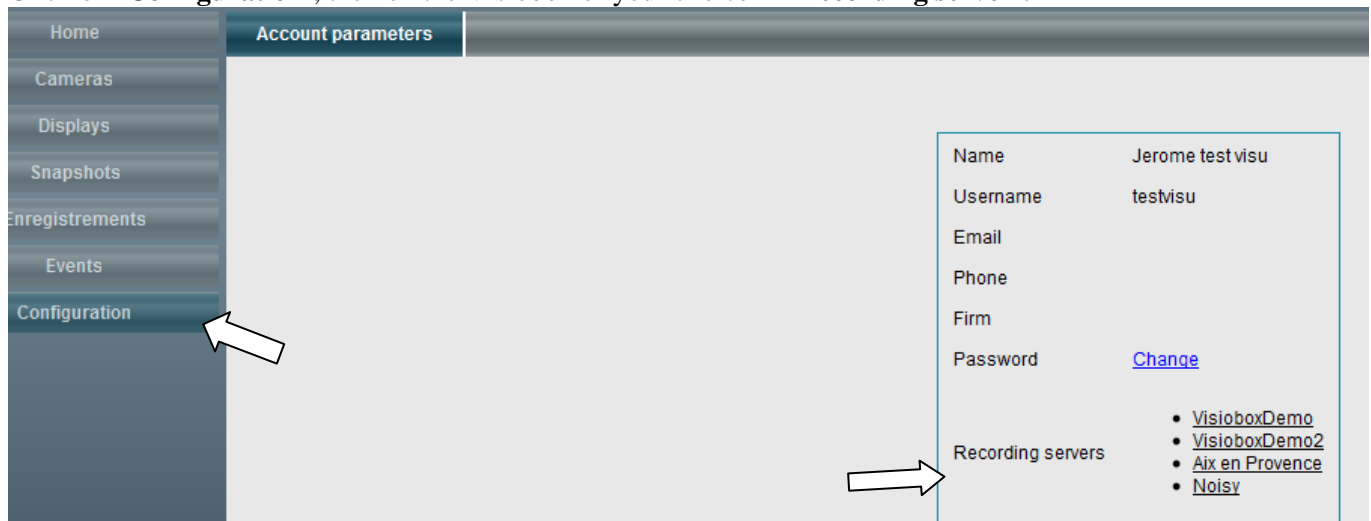


Select your chosen language, identify yourself using your normal username and password, then click "Login".

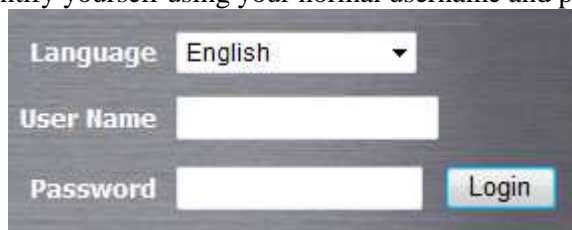


First click on 'Playback' then 'Open record'.




Select the cameras you wish to use to consult a recording by clicking on the appropriate camera name(s). Define a time period for playing the recording, setting both start and end times. To finish, click OK.

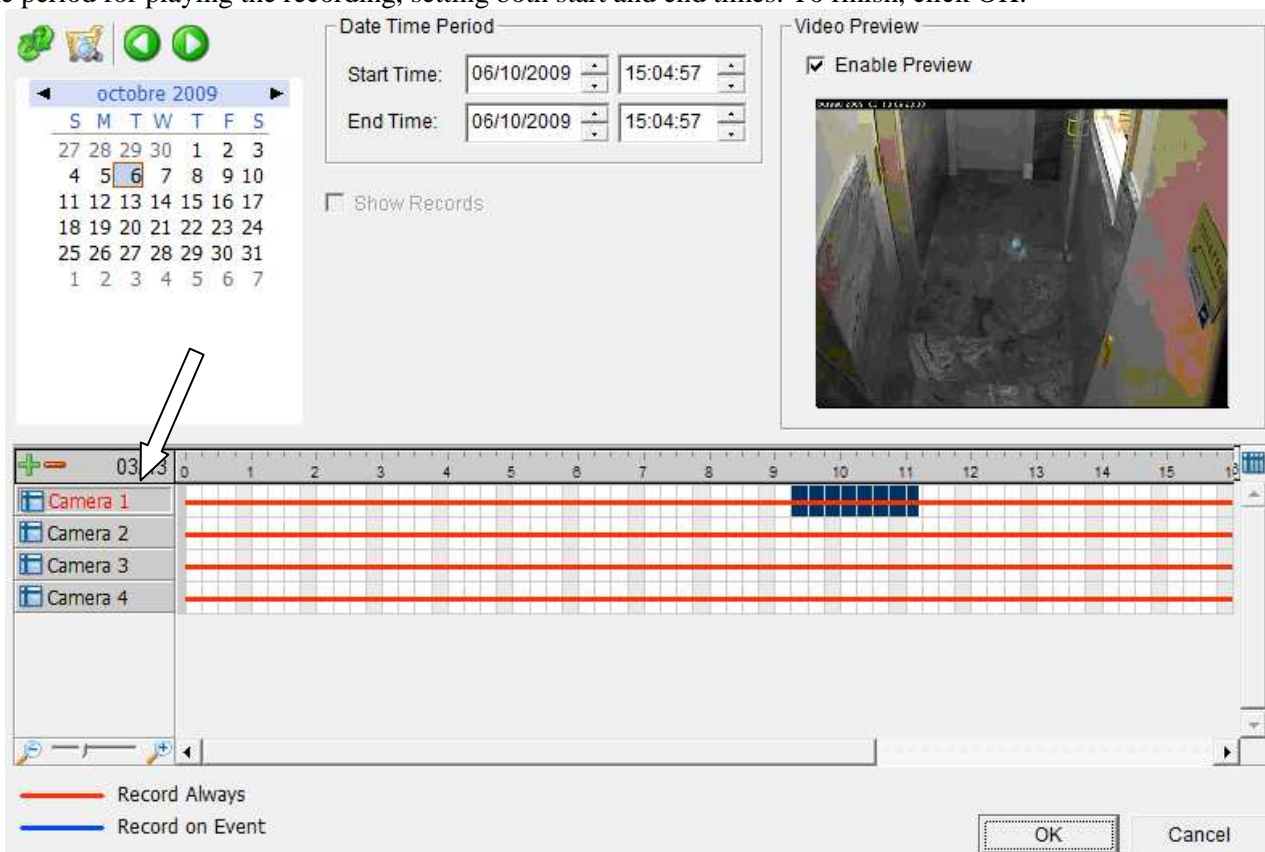

The next page displays the video from the selected cameras. A description of the various options offered by the recording player is shown below.

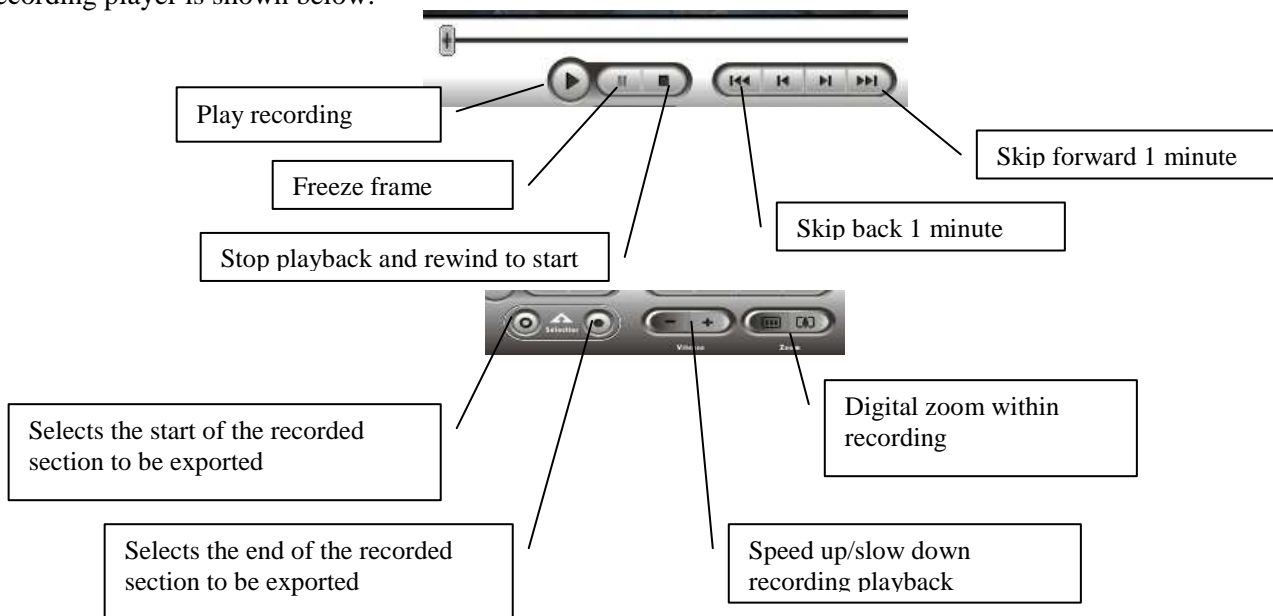

Click on **'Save Video'** to download the selected video section onto your computer.

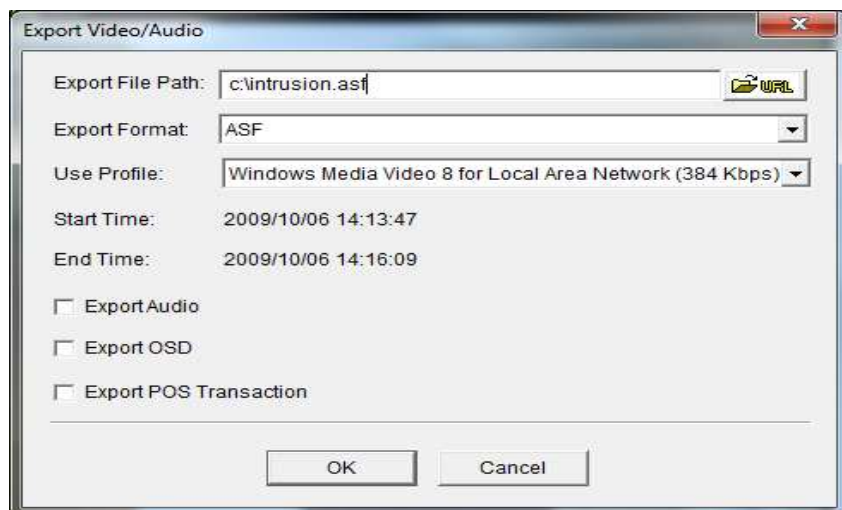

Click "URL" to define the location of the recording and the desired filename.

'Export format' and **'Use profile...'** should be left on their default settings.

To finish, click OK to start the download.

Make sure you check the recording time. The longer the selection, the longer the download time. Downloading sequences of between 1 and 15 minutes is recommended.

End of guide